


2-4-3. INSTALL SOFTWARE

System Software can be installed in 3550 / 3550R. The System Update Function Window displays the System Software version installed in the Unit.

NOTE: When loading Software into the 3550 / 3550R, the Calibration Values are not affected.

Follow these instructions to install System Software in the Unit:


1. Select the System Function Tab to display the System Dropdown selections. Select "System Update" to display the System Update Function Window.

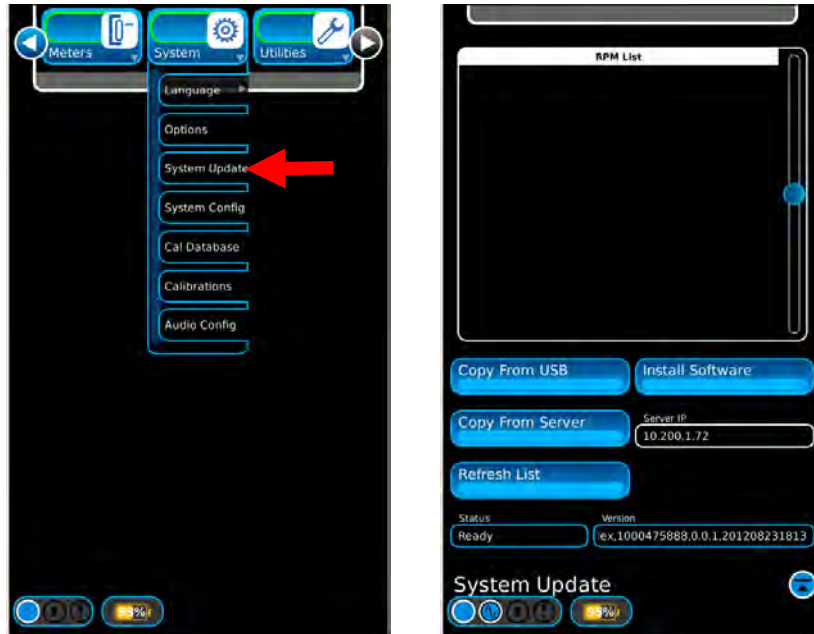

2. Using a PC, access the following website: aeroflex.com/3550. Download the zip file containing the System Software to the PC.
3. After removing all files from a USB Flash Drive, unzip the System Software files to the root directory of the USB Flash Drive.
4. Plug in the USB Flash Drive in the USB Connector and wait for the Unit to recognize the USB Flash Drive (approximately 15 seconds).

2-4-3. INSTALL SOFTWARE (cont)


5. Select Copy from USB Button and verify Status Field displays “Copying Software” then “Refreshing List.” Items are displayed on the RPM List.

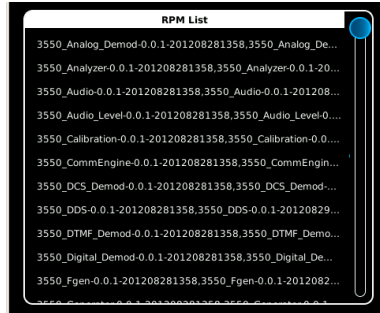

6. When the Status Field displays “Files are ready to install” select the Install Software Button. The following message is displayed. Select the OK Button to continue. Press the Cancel Button to abort the Software Load.



7. Progress Bars are displayed showing the installation progress

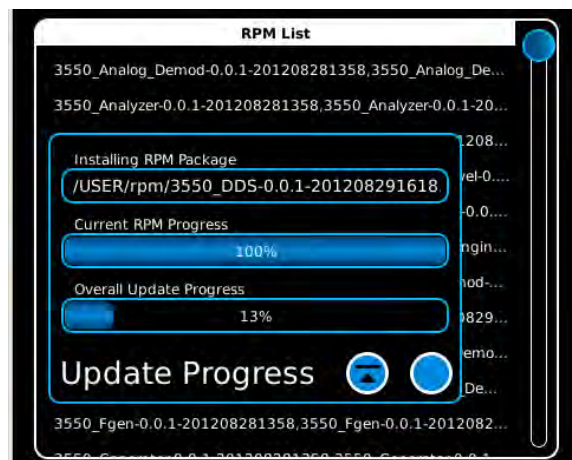

2-4-3. INSTALL SOFTWARE (cont)

8. The Unit prompts to cycle power if additional items are still displayed. Cycle power and repeat Steps 5 and 6 until all displayed items have been installed in the Unit.

